
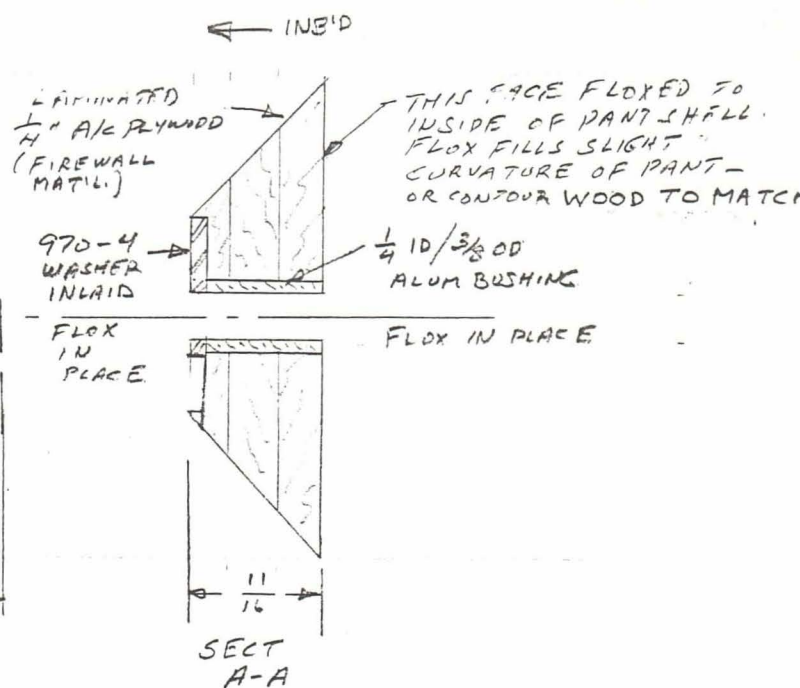


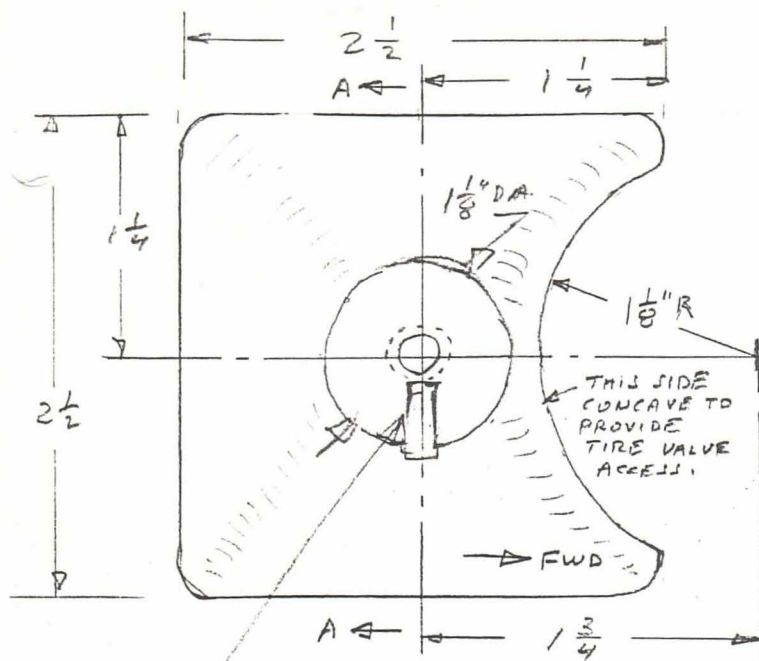


CUT $\frac{3}{16}$ " WIDE SLOT IN 970-4 WASHER FOR AXLE NOT COTTER KEY CLEARANCE ON END OF AXLE.*

"PYRAMID." - MAKE L.H., R.H.


L.H. SHOWN, R.H. OPPOSITE STEP 2.1

* PROPERLY SAFETIED COTTER BENDS ONE LEG OUT BID AND THEN UP OVER END OF AXLE, OTHER LEG INBOARD TO WASHER UNDER NUT, NOT RADIALY L & R.

STEP
2.2
&
2.3

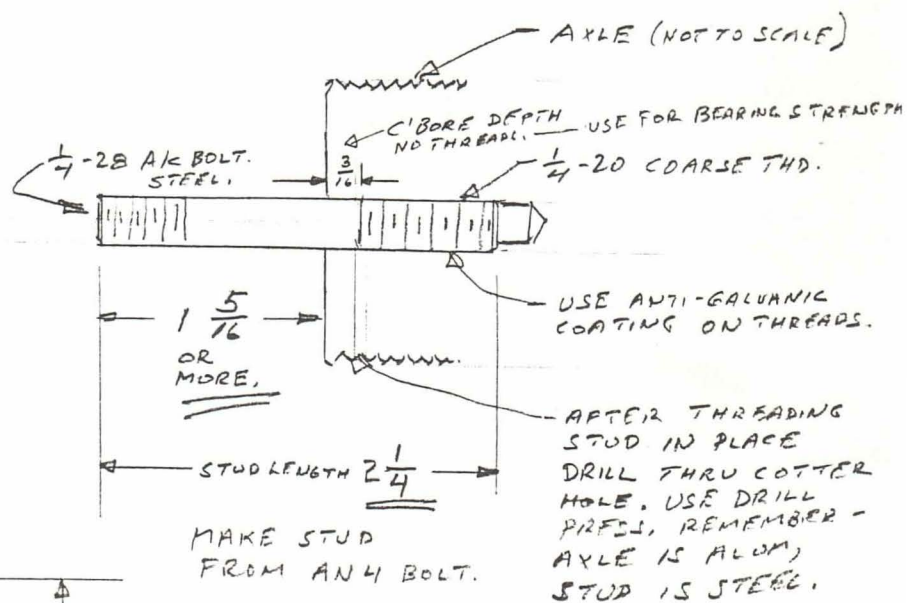

NOT TO SCALE!

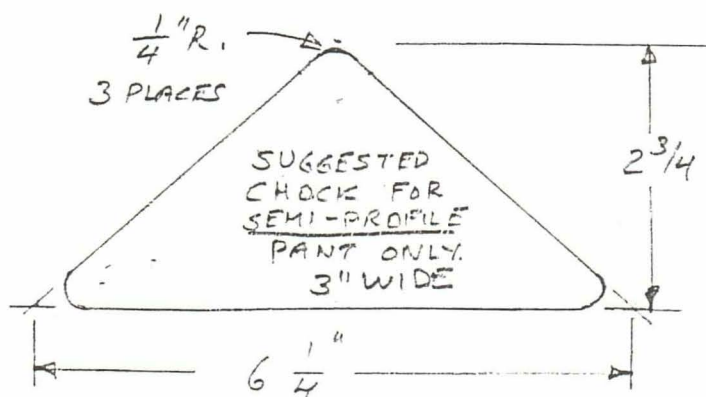

INBOARD MOUNTING SPIDER


FLAT PATTERN - FULL SIZE

RIGHT HAND SHOWN - L.H. OPPOSITE

052 2024 ST ALUM.

STEP 2.4

MAKE
ONE
EACH

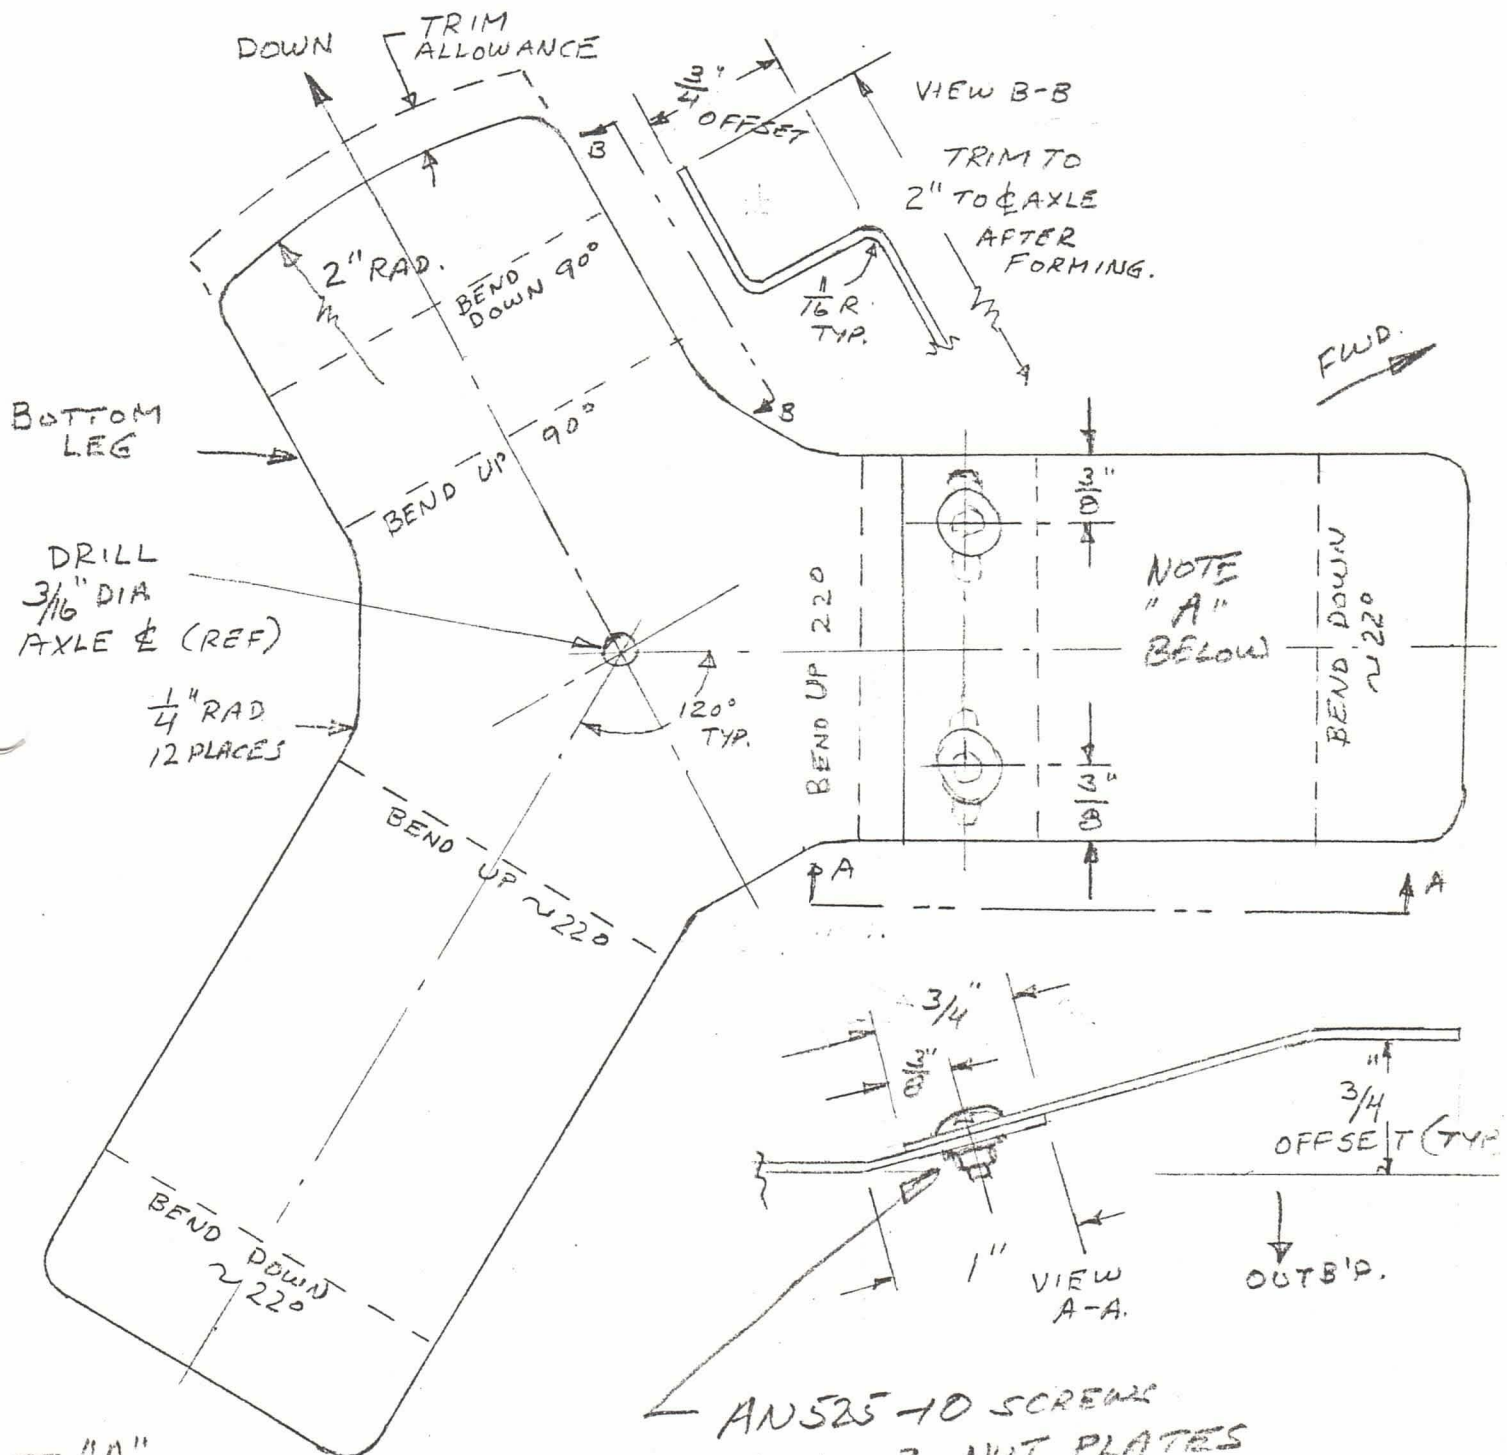

NOTE "A".

THIS "FORWARD" LEG SHOULD BE REMOVABLE FOR BRAKE PAD SERVICING. DIMENSIONS ARE SUGGESTED ONLY. CHECK YOUR INDIVIDUAL INSTALLATION BEFORE FINALIZING.

AN525-10 SCREWS
K1000-3 NUT PLATES
FLUSH RIVETED.
CHECK GRIP LENGTH OF
SCREWS. (NO THREADS
IN SHEAR)